

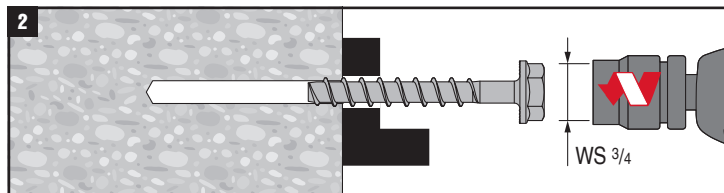


KWIK HUS-EZ	h_1^*	t_{fix}
$1/2 \times 2 1/2$	$2 7/8 - t_{\text{fix}}$	$0 \dots 1/4$
$1/2 \times 3$	$3 3/8 - t_{\text{fix}}$	$0 \dots 3/4$
$1/2 \times 3 1/2$	$3 7/8 - t_{\text{fix}}$	$0 \dots 1/2$
$1/2 \times 4$	$4 3/8 - t_{\text{fix}}$	$0 \dots 1$
$1/2 \times 4 1/2$	$4 7/8 - t_{\text{fix}}$	$0 \dots 1/4$
$1/2 \times 5$	$5 3/8 - t_{\text{fix}}$	$0 \dots 3/4$
$1/2 \times 6$	$6 3/8 - t_{\text{fix}}$	$0 \dots 1 1/4$
$1/2 \times 7$	$7 3/8 - t_{\text{fix}}$	$0 \dots 2 3/4$
$1/2 \times 8$	$8 3/8 - t_{\text{fix}}$	$0 \dots 3 3/4$

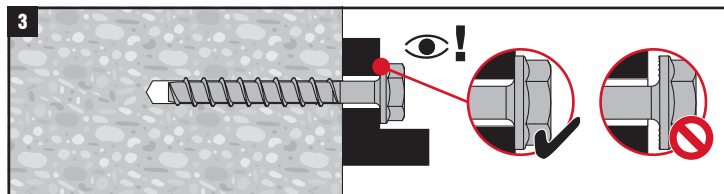

2.1	 ½ x 2½...3 	 ½ x 3½...8 		
 SIW 22	✓	✓	✗	✗
 SIW 22T-A	✗	✗	✓	✓
	45 ft-lb	34 ft-lb	45 ft-lb	34 ft-lb

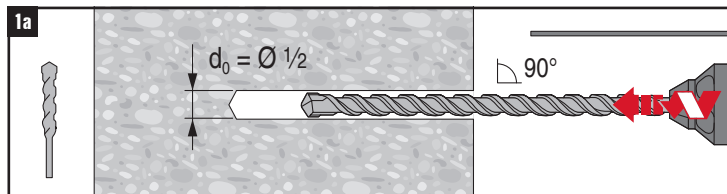

*For non-hole cleaning installation (steps 1a or 1b), make sure to drill deep enough to achieve h_1 , taking into account the depth of debris remaining in the hole.